



FCC Information English

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

 
CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Have a Blast-Just Not in your eardrums! Make sure you turn down the volume of the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits. If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000345-4 when ordering copies.

This product complies with DHSIS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

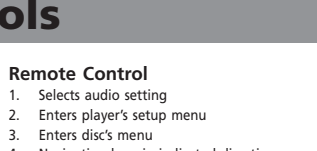

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Precautions

General Precautions

Water and Moisture - Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like. Do not spill liquids on your Portable DVD or its components as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. To clean your Portable DVD use a soft slightly damp cloth. Always allow all the components to dry completely before using again.

Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Heat - The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Do not expose the Portable DVD or any of its components to extreme heat or cold. Do not expose the player to direct sunlight.

Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.

Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

 
ACDC power adapter cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.


Main plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

General Controls

Main Unit

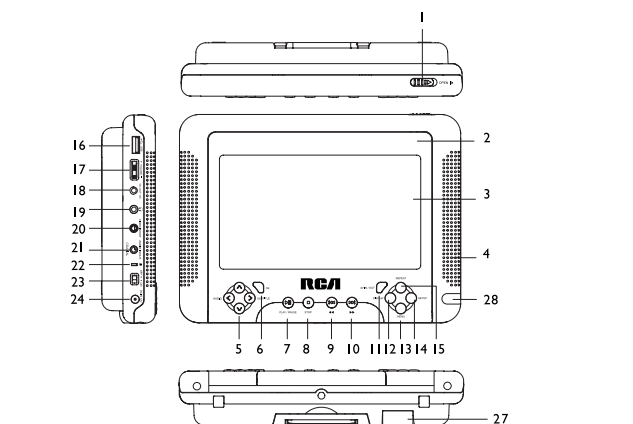

Monitor Unit

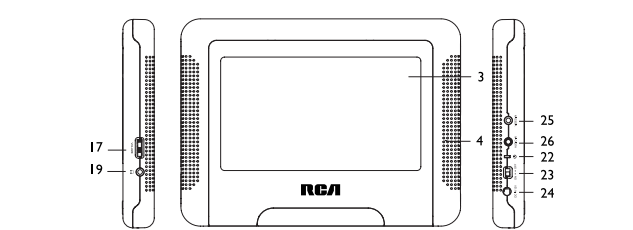 

General Controls

Remote Control

1. Selects audio setting
2. Enters player's setup menu
3. Enters disc's menu
4. Navigation keys in indicated direction, press **OK** to confirm selection
5. Skip backward or forward a chapter or track
6. Search backward or forward
7. Starts and pauses playback
8. Numeric input keys
9. Press **SHIFT** ("SELECT FUN" appears on the screen) and then the following keys to access below functions:
 - SHIFT + 1 - slow reverse playback
 - SHIFT + 2 - resume playback
 - SHIFT + 3 - enters title menu
 - SHIFT + 4 - selects zoom options
 - SHIFT + 5 - performs A-B repeat
 - SHIFT + 6 - selects random playback
 - SHIFT + 7 - selects repeat mode
 - SHIFT + 8 - enters bookmark menu
10. Mutes sound output
11. Selects subtitle setting
12. Selects angle setting
13. Selects display information
14. Enters program mode
15. Enters search menu
16. Stops playback
17. Enters step advance mode or slow forward playback
18. Clears inputs
19. Selects AV input or output

Notes on the remote control
On the remote control, remove the plastic tab from the battery compartment before first use. To replace battery, slide the release lock to the right and pull out the battery tray. (One button type, CR2025 battery required)

 
When using the remote control, make sure you are pointing to the remote sensor located at the front of the player (where the power indicator is located).

CAUTION
Danger of explosion if battery is incorrectly installed. Replace only with the same or equivalent type of battery.

Connections

External Connections

This player can output / input sound and picture to / from external devices. Follow the diagram below to set up the required connections. Always switch off the player before connecting to any devices.

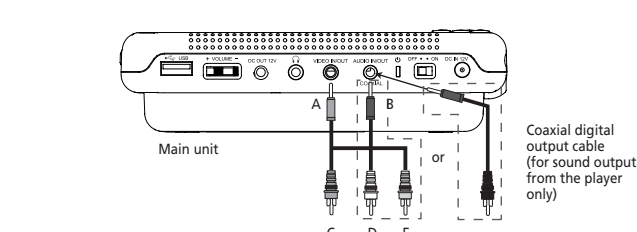

- A - connect the smaller yellow connector of the AV cable to the VIDEO IN/OUT jack.
- B - connect the black connector of the AV cable to the AUDIO IN/OUT jack. Alternatively, connect the smaller connector of the coaxial digital output cable (included) for better sound quality.
- C - connect the larger yellow connector of the AV cable to the video input jack of a TV or display unit.
- D & E - connect the white connector of the AV cable to the left channel audio input jack of an external audio device (e.g. active speaker systems) (Red connector to the right channel input jack). If you are using the coaxial digital output cable, connect the larger end of the coaxial digital output cable to the coaxial input jack of an external audio device (e.g. amplifier or receiver).

- A - connect the smaller yellow connector of the AV cable to the VIDEO IN/OUT jack.
- B - connect the black connector of the AV cable to the AUDIO IN/OUT jack.
- C - connect the larger yellow connector of the AV cable to the video output jack of a TV or display unit.
- D & E - connect the white connector of the AV cable to the left channel audio output jack of an external audio device (e.g. active speaker systems) (Red connector to the right channel output jack).

Press **AV IN/OUT** to enjoy sound and picture from the external device.

 
Connections

Connecting the Power

1. Connect the power adapter to the DC input jack of the main unit.
2. Connect the other side of the power adapter with the wall plug or car adapter.
3. Turn on the power.
4. Disconnect the adapter if the set is not used for a period of time.

Connecting the Monitor Unit with the Main Unit

1. Connect the AVP (Audio, Video and Power) cable to the AUDIO IN/OUT, VIDEO IN/OUT and DC OUT jacks of the main unit.
2. Connect the other end of the AVP cable to the AUDIO IN, VIDEO IN and DC IN jacks of the monitor unit.

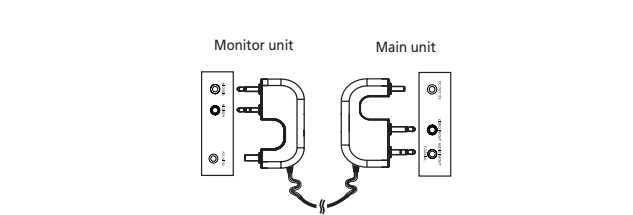

- Make sure the video connector is not damaged.
- Make sure you have set the player's video settings correctly.
- It is impossible to read the disc
 - Make sure the disc is inserted with the printed side up.
 - Make sure the disc is not warped, damaged, deformed, stained or scratched.
 - Check that the disc format is supported by the player.
 - Check that the disc's regional code matches that of the player. This player's regional code is 1.
- Remote control is not working
 - Battery may be empty.
 - Make sure you are pointing to the remote sensor on the player while using.
- You have forgotten your rating password.
 - Enter 9688 in the password menu to clear the memory. Keep this master password out of the reach of children. Refer to "Player Setup - System Setup" for details.

DVD Playback

Zoom

During playback, press **SHIFT** ("SELECT FUN" appears on the screen) and then **Zoom** (remote control) repeatedly to select a zoom in or out option to enlarge or reduce image size.

Slow Reverse playback

Press **SHIFT** ("SELECT FUN" appears on the screen) and then **Slow Rev** one or more times to vary the speed of slow reverse playback. Press **PLAY/PAUSE** to resume normal playback.

Slow forward playback

Press **STEP/SLOW** one or more times during playback to vary the speed of slow forward playback. Press **PLAY/PAUSE** to resume normal playback.

Bookmark

You can create temporary bookmarks to set points on the disc you watch frequently.

1. When the disc reaches the scene you want to mark, press **SHIFT** ("SELECT FUN" appears on the screen) and then **BOOKMARK**.
2. Press **OK** to mark that point as a bookmark. You can create up to 5 bookmarks.
3. To add another bookmark, repeats steps 1 and 2.
4. To play a bookmark, use **<** > to highlight the bookmark, and press **PLAY/PAUSE**.

Clearing Bookmarks
To clear a bookmark, press **SHIFT** and then **BOOKMARK**. Use **<** > to highlight the bookmark you want to clear, then press **CLEAR**.

Displaying Playback Information

Press **DISPLAY** repeatedly during playback to show various playback information on screen. They include current title and chapter, playback time, audio, subtitle and angle settings.

Changing Audio and Subtitle Settings

On the player, press **AUDIO** repeatedly during playback to select an audio setting. The current audio setting shows on the display briefly. On the remote control, press **AUDIO** or **SUBTITLE** repeatedly for corresponding setting.

Tips: For VCD playback, press **AUDIO** repeatedly to select audio channel: mono left, mono right or stereo; press **MENU** repeatedly to select PBC mode (if available on the disc) on or off.

Changing Angle

Press **ANGLE** (remote control) repeatedly to select angle setting (if available on the DVD disc).

Accessing Disc Menu

At anytime during playback, press **MENU** to access disc's menu.

 
Muting
Press **MUTE** (remote control) to cut sound output. Press again to restore.

Screen Saver

Screen saver will show when the player is idle for more than 5 minutes. Press any key to de-activate it.

Playback of MP3, WMA and JPEG Files

Your player also supports playback of MP3, WMA and JPEG files. When a disc is loaded, the player will automatically search for supported files and begin playback automatically. During playback of MP3 and WMA files and stop mode of JPEG files, the following screen will appear:

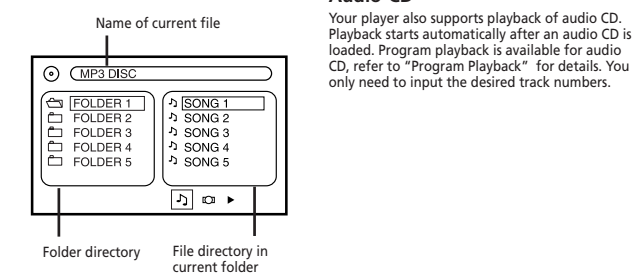

- Use **<** > > > keys to move to different files or directories.
- Press **OK** to play the file highlighted.
- While viewing JPEG files, press **<** > > > keys will rotate or flip picture respectively.
- Program playback is available for mp3 and WMA discs, refer to "Program Playback" for details.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

Troubleshooting Tips

The unit is not working.

- Turn off the power, and then turn it on again.
- Make sure power cord is properly connected.
- The unit cannot operate when the car adaptor power supply voltage is above 16V.

There is no sound or picture.

- Check the connection to the mains socket.
- Make sure the power switch is on.
- Make sure the power outlet is operational.
- Make sure the power cord is not damaged.
- Make sure the volume is not set too low.

There is no sound or sound quality is poor.

- Make sure the audio jacks are securely connected.
- Make sure the audio connector is not damaged.
- Make sure the volume is turned up.
- Make sure you have set the player's audio settings correctly.
- Make sure you have entered the correct AV input for your TV.

There is no picture or picture quality is poor.

- Make sure that the AV in/out mode is properly selected.
- Make sure the video jacks are securely connected.
- Make sure you have entered the correct AV input for your TV.

General Controls

 
1. Opens the disc compartment door
2. LCD display
3. Speaker
4. Menu navigation keys (up, down, left and right), the right key also selects subtitle setting, the left key also selects audio setting
5. Confirms selections
6. Starts and pauses playback
7. Stops playback
8. Skips backward a chapter / track; searches backward
9. Skips forward a chapter / track; searches forward
10. Selects AV input or output mode
11. Selects information to be displayed
12. Enters disc's menu
13. Enters player's setup menu
14. Selects repeat mode during playback
15. USB Connector
16. Volume control
17. DC power output jack
18. Earphone jack
19. Video output / input jack
20. Audio output / input jack or coaxial digital output jack
21. Power indicator
22. Power switch
23. DC power input jack
24. Video input jack
25. Audio input jack
26. Battery socket cover (optional battery can be purchased separately)
27. Remote control sensor

Accessories

- Check that all the following accessories come with your unit in the package:
1. ACDC adapter x 1
 2. AVP (Audio, Video and Power) Cable x 1
 3. Headrest mount x 2
 4. Car power cable x 1
 5. AV cable x 1
 6. Carrying case x 1
 7. Coaxial digital output cable x 1
 8. Remote control x 1


Standing Support

Both the main and monitor units have support stand on the back. Pull out the stand as indicated on the unit's back.

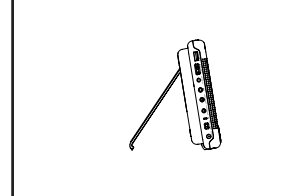

Tocom: 5633 7340

 user manual

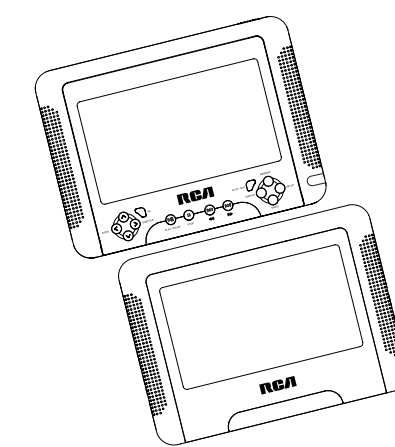

EN/E

DRC629N

Please read this user manual carefully to ensure proper use of this product. Keep this manual for future reference. Es importante leer este manual antes de usar por vez primera su equipo.

Quick Start & Player Setup

Quick Start

1. Slide **ON/OFF** switch to turn on the player. The DVD logo appears on the screen.
2. Open the disc compartment door. Place the disc in the tray with the printed side up. Push back the compartment door. The player will automatically try to read and play the disc. If a menu appears, one of its options can be selected to start playing the disc. Select it using **<** > > > keys and press **OK**.

Player Setup

Press **SETUP** and the player's setup menu will show on screen.

Select a menu icon using **<** > keys. Then select one of the available options using **<** > > > keys. Press **>** key to access the submenus and use **<** > keys to select an option. Press **OK** to confirm your selections. Return to a previous menu using **<** key.

To exit from the player menu, press **SETUP** again.

System Setup

Setup the TV system, TV type, screen format, screen orientation, rating, password and restore to default settings.

Rating feature is a parental guardian feature which disables playback of certain DVDs based on their ratings from 1 (most restrictive) to 8 (least restrictive). DVDs that are rated above the level you set will not play until the correct password is entered.

If a password has been set, you cannot change the rating without entering the correct password. To set up the password, highlight the Password part to input a 4-digit password with the numeric keys on the remote control. Press **OK** to set the password.

Language Setup

Setup the language of the OSD, Audio, Subtitle and Menu.

Video Setup

Setup the brightness, contrast, hue and saturation.

Digital Setup

Setup the Audio Output mode (SPDIF OFF/RAW/PCM) and DRC (Dynamic range control).

TVG Setup

TVG Mode: Select among Off, Tolerant, Moderate and Strict with increasing filtering standards.

Word Subset Filtering:

In addition to the main TVG mode listed above, you can turn certain word subsets on or off: Damn and hell - filters out variations of "Damn" and "Hell".

Religious - filters out references to deity. To watch religious programs, turn this word subset off.

Sexual - filters sexually explicit languages.

CC Mode:

CC Off - captions are never displayed.

ON Mute (default) - captions are displayed when offensive language is being filtered.

CC Continuous - captions are displayed continually.

 
CC Channel:

To use the TVG captioning features while watching a DVD movie, your television must be capable of displaying closed captions. Make sure that your TV CC is set to CC or CI (closed caption on channel), and that the CC channel on your DVD player is set to CC2 (default setting). Select also Setup Help for details on TVG setup.

More Information

Car Mounting

You can easily mount the player on the back of a car seat headrest with the help of a headrest mount. See illustration below:

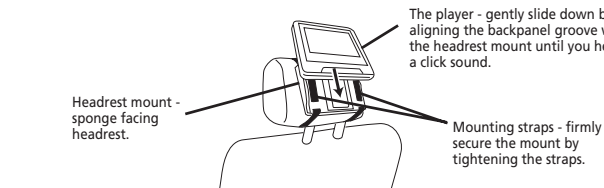

Specifications

Model	DRC629N
TV System	NTSC
Supported Disc Formats	DVD, SVCD, VCD, CD, HDCD, CD-R, CD-RW, DVD+R, DVD+RW
DVD Regional Code	MPEG, MP3, WMA, JPEG, Kodak Picture CD
AV Input/Output	1
Power Requirement	Composite x 1, Coaxial digital output (audio) x 1
Power Consumption	DC in 12V (power adapter bundled)
Operating Temperature	$0.5W$ (main unit), $4W$ (monitor unit)
Operating Humidity	5°C to 35°C (41°F to 95°F)
Size	5% to 90% (no condensation)
Weight	210(W) x 160(D) x 41(H) mm (main unit), 210(W) x 160(D) x 24(H) mm (monitor unit)
	690g (main unit), 380g (monitor unit)

DVD Regional Code

Your DVD player has been designed to process regional management information that is stored on DVD discs. The regional code for your player is 1 (The U.S., U.S. Territories and Canada). Only DVD discs that have regional codes of 1 or ALL (for all regions) can be played by your player.

DVD Copy Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited consumer use only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

EN/E

DRC629N

Please read this user manual carefully to ensure proper use of this product. Keep this manual for future reference. Es importante leer este manual antes de usar por vez primera su equipo.

DVD Playback

Playback

For basic playback, refer to "Quick Start". Note: The player stores the point where playback was interrupted. If you press **PLAY/PAUSE** again, playback resumes from this point. To stop playback completely or to start from the beginning, press **STOP** twice.

Accelerated Play

While the disc is playing, press and hold **<<<** or **>>>** (or press **REV** or **FWD** on remote control) one or more times to vary the speed and direction of the accelerated play. Press **PLAY/PAUSE** to resume normal playback.

Still Image

While the disc is playing, press **PLAY/PAUSE** once to freeze frame.

Frame Advance

While the disc is paused, press **STEP/SLOW** (remote control) to activate STEP mode. Each press of **STEP/SLOW** will advance forward image by frame. Press **PLAY/PAUSE** to resume normal playback.

Changing Chapter / Track

While the disc is playing, press and release **<<<** or **>>>** (or press **PREV** or **NEXT** on remote control) to go immediately to the previous or next chapter, or to the previous or next track.

Repeat Playback

During playback, press **SHIFT** ("SELECT FUN" appears on the screen) and then **REPEAT** repeatedly to select repeating a chapter or a title (DVD disc).

A-B Repeat

During playback, press **SHIFT** ("SELECT FUN" appears on the screen) and then **REPEAT** (remote control) once at the start and press again at the end of a desired repeat section. The

screen will repeat continuously until you press **SHIFT** and then **A-B** to resume normal playback.

Random Playback

Press **SHIFT** ("SELECT FUN" appears on the screen) and then **RANDOM** (remote control) to select random mode on or off. Tracks or chapters will be played in random order when the function activated.

 
Searching

Press **SEARCH** (remote control) to enter search menu (shown on top of the screen). For DVD, you can direct access to a title, chapter or time on the disc by inputting the values with the numeric keys on the remote control. Press **<** > to select a search method (title, chapter or time).

Program Playback

When playback is stopped, press **PROGRAM** to show the program menu.

1. Highlight an input field by using **<** > > > keys. "T" stands for title and "C" for chapter.
2. Use the numeric keys on the remote control to input values.
3. Repeat steps 1 and 2 to program more.
4. Highlight "PLAY" on screen and press **OK** to start playback. Highlight "CLEAR" on screen and press **OK** to clear all programs.

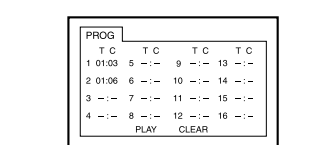

U.S. Limited Warranty

What your warranty covers:

- Defects in materials or workmanship.
- Products purchased or serviced outside the U.S.
- Acts of nature, such as but not limited to lightning damage.